


POWERBREEZE

Bedienungsanleitung

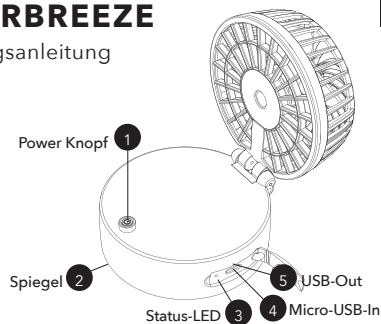

Erster Druck auf Powerknopf	niedrige Windstärke
Zweiter Druck auf Powerknopf	mittlere Windstärke
Dritter Druck auf Powerknopf	hohe Windstärke
Vierter Druck auf Powerknopf	Ausschalten
3 Sekunden halten	Powerbankfunktion an/aus

Bitte lesen Sie die Gebrauchsanleitung vor Inbetriebnahme gut durch und bewahren Sie sie danach auf. Wenn Sie das Gerät einer anderen Person überlassen, geben Sie auch ihr diese Anleitung weiter.

KONFORMITÄTSEKLÄRUNG

Hiermit erklärt ZOGI /Herzog Products GmbH, dass dieses Produkt den gesetzlichen EU Bestimmungen, Normen und Richtlinien zum Zeitpunkt des Erwerbs entspricht.

Die Konformitätserklärung finden Sie unter folgendem Link:

<https://zogi.biz/wp-content/uploads/2017/09/conf-powerbreeze.pdf>

de

01 LIEFERUMFANG

1 x Powerbreeze, 1 x Ladekabel, 1 x Bedienungsanleitung

02 SICHERHEITSHINWEISE

- › Das Produkt ist für die private Nutzung bestimmt.
- › Das Produkt außerhalb der Reichweite von Kindern aufbewahren.
- › Das Produkt vor Feuchtigkeit schützen. Es besteht Brandgefahr.
- › Das Produkt nicht erhitzen, vor Hitze schützen und nicht ins Feuer werfen. Es besteht Verletzungsgefahr durch entweichende Gase, austretende Flüssigkeit oder Explosion.
- › Das Gehäuse nicht öffnen, es besteht Verletzungsgefahr durch den Kontakt mit Bestandteilen sowie Brandgefahr.
- › Das Produkt nicht deformieren. Das Produkt darf nicht gequetscht, angebohrt oder auf andere Weise beschädigt werden. Bei Missbrauch besteht Verletzungsgefahr durch entweichende Gase, austretende Flüssigkeit oder Explosion.

03 INBETRIEBNAHME

Hinweis: Während des Ladeprozesses erwärmt sich das Produkt. Stellen Sie fest, dass das Produkt extrem heiß wird, unterbrechen Sie die Stromversorgung und verwenden es nicht mehr. Es besteht Verletzungsgefahr durch austretende Gase, Flüssigkeit oder Explosion.

- › Beim erstmaligen Gebrauch oder nach längerer Lagerzeit sollte das Produkt geladen werden.
- › Starten Sie den Ladevorgang, indem Sie das beiliegende USB / Micro-USB Kabel an den Micro-USB Eingang des Produkts sowie an den USB-Anschluss (5 V DC) eines PCs/Laptops anschließen.
- › Der Ladevorgang startet und endet automatisch.
- › Die volle Leistung wird normalerweise nach dem dritten kompletten Be- und Entladevorgang erreicht.

de

04 LADEN VON ENDGERÄTEN

- › Starten Sie den Ladevorgang (Smartphone, MP3-Player, etc. mit DC 5V Stromversorgung), indem Sie das beiliegende USB/ Micro-USB Kabel an den Micro-USB Eingang Ihres Endgerätes sowie an den USB-Anschluss des Produkts anschließen.
- › Unter Umständen ist das beiliegende USB/Micro-USB Kabel für den endgeräteseitigen Anschluss unpassend. Verwenden Sie das Original USB-Kabel Ihres Endgerätes.
- › Der Ladevorgang startet und endet automatisch.

05 TECHNISCHE DATEN

Batterie: Li-Ion-Akku; 2.600 mAh; 3,7 V; 9,62 Wh
Kapazität: 2.600 mAh
Input: DC 5 V; 1 A
Output: DC 5 V; 1 A

06 ENTSORGUNG

Elektro- und Elektronik-Altgeräte dürfen nicht mit dem Hausmüll entsorgt werden, sondern müssen an einer öffentlich ausgewiesenen Sammelstelle oder bei der Verkaufsstelle abgegeben werden. Für weitere Informationen wenden Sie sich bitte an Ihre Verkaufsstelle oder die öffentlichen Behörden. Wenn Sie die Verpackung entsorgen, achten Sie auf die entsprechenden Bestimmungen in Ihrem Land.

Herzog Products GmbH
Gutenbergstraße 2
D-75210 Kelttern


WWW.ZOGI.BIZ



Made in China

POWERBREEZE

User Manual

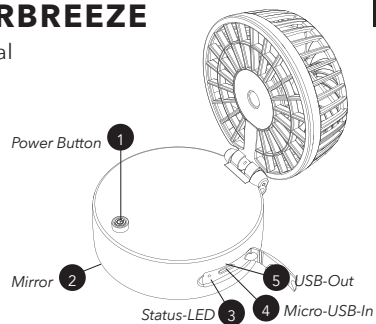

First press power button	low wind speed
Second press power button	middle wind speed
Third press power button	high wind speed
fourth press power button	power off
Long press 3 seconds	powerbank function on/off

This manual contains important safety and operating instructions. Before using the product, read all instructions and cautionary markings on product carefully. Save this Manual for future reference or other users.

DECLARATION OF CONFORMITY

Hereby ZOGI / Herzog Products GmbH declares that this product complies with the legal EU regulations, standards and guidelines at the time of purchase.

The Declaration of Conformity can be found under the following URL: <https://zogi.biz/wp-content/uploads/2017/09/conf-powerbreeze.pdf>

en

01 SCOPE OF DELIVERY

- 1 x Powerbreeze
- 1 x USB charging cable
- 1 x User manual

02 IMPORTANT SAFEGUARDS

- › DO NOT expose the product to rain, moisture or snow.
- › DO NOT operate the product if it has received a sharp blow, been dropped, or otherwise damaged in any way, take it to a qualified service person.
- › DO NOT disassemble the product. Take to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- › To reduce the risk of electrical shock, unplug the product before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
- › DO NOT use under water or immerse in water.
- › DO NOT operate the product while charging.
- › This item is not a toy. Keep out of reach of children.

03 COMMISSIONING

Important: During the charging process, the product is heated, this is normal. If you find that the product is extremely hot, disconnect the power supply and do not use it more. Risk of injury by escaping gases, liquid or explosion.

- › Charge the product fully before first use
- › Plug the micro USB end of the charging cord into the micro USB Input on the product
- › Plug the USB connector end of the charging cord into the USB port of any computer or USB compatible wall charger

en

04 CHARGING YOUR MOBILE DEVICE

- › Plug the mobile device's power cord into the product
- › Start the charging process (smartphone, mp3-player, etc. all with DC 5V power supply) by connecting the included cable with both the micro-USB input at your device and the USB input at the product.
- › Under certain circumstances, the included USB/micro USB cable is inappropriate for your special device. In this case use the original cable from your product.
- › Charging will start and end automatically.

05 SPECIFICATIONS

- Battery: Li-Ion-Akku; 2.600 mAh; 3,7 V; 9,62 Wh
- Capacity: 2.600 mAh
- Input: DC 5 V; 1 A
- Output: DC 5 V; 1 A

06 DISPOSAL

Electrical and electronic equipment must not be disposed of with household waste, but must be returned to a public separate collection or at the point of sale.

For more information, please contact your sales outlet or the public authorities. When you dispose of the packaging, pay attention to the relevant regulations in your country.

Herzog Products GmbH
Gutenbergstraße 2
75210 Keltern, Germany

WWW.ZOGI.BIZ



Made in China

en